

## **NTG Motor Services Limited**

282 - 284 Bramford Road Ipswich Suffolk IP1 4AY

Tel: ++44 (0)1473 - 406031 & 406032

Fax: ++44 (0)1473 - 742087 Email: sales@mgbits.com


www.mgbits.com www.bmcfarina.com

Directors: M.Green P.Banyard Company Reg.No. 1262476 V.A.T.Reg. No. 289 5422 17

Wiper Motor Adjusting (L076, L077, L078, L079 & L080)

All supplied wiper motors will need some form of adjustment once installed on your vehicle to fine tune them. This is quite an easy operation using the following steps.

- 1. Before fitting the wiper arms and blades, operate the wiper switch to ensure the rack has located correctly with the wheel boxes. When power is cut by turning off wipers the **rest** position is achieved.
- 2. Fit wiper arms without blades and keep away from the glass.(at this point) to ensure accidental damage to paintwork and that wiper arms are positioned to operate the correct way.
- 3. Once satisfied, you can refit the blades and position against glass
- 4. To change the **rest** position on the wiper motor, loosen the 4 screws arrowed in the photograph and rotate the metal casing to your chosen position.

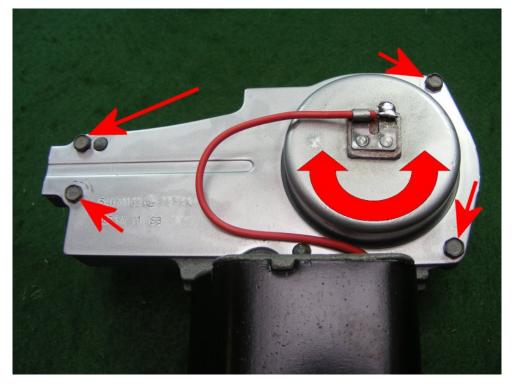





Above photos show connector against the metal cap brass connection/rest position settting.

